

Water: ON, Step 1.

Close the 2 bleeds for the supply lines turning water ON.
(green handled ball valves above hot water tank in bathroom)

Open the 2 bleeds turning water OFF.



Water: OFF, Step 3.




Water: ON, Step 2.

Turn Main handle CCW 90° turning water ON.
(located outside, in wood box below electrical box)

Turn Main handle CW 90° turning water OFF.

Water: OFF, Step 2.

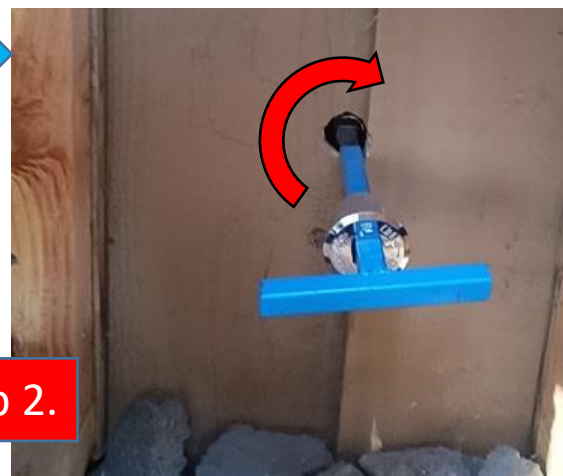

Water: ON, Step 3.

Flip ON/right, water heater breakers handle turning water ON.
(located outside, in electrical box)

Flip OFF/left, water heater breakers handle turning water OFF.

Water: OFF, Step 1.



When turning **Water ON** complete steps 1-3 then close all faucets (kitchen sink, bathroom sink and shower) once flow is established.

When turning **Water OFF** complete reverse steps 1-3, then leave open all faucets (kitchen & bathroom, flush toilet). Additionally put Anti-freeze in toilet and all drains.